

Dual Display Thermometer Instructions

- 1 Remove printed protective film from LCD screen.
- 2 Remove insulation film from the battery contact by pulling where it is marked 'remove before use'. N.B: To open the battery compartment place thumb where it is marked 'open' and slide back to reveal one AAA size alkaline battery.
- 3 Place unit indoors where lead can be routed to outdoors e.g. through window/door frame or vent etc. Fix outdoor probe (on end of lead) in convenient position where outdoor temperature will be taken from. N.B: The thermometer has its own stand which pulls out via a thumb catch at the bottom of its back panel. It can also be wall mounted on a screw by means of the 'keyhole' at the top of its back panel.

Control Buttons

- 1 °C/°F – switches between Centigrade and Fahrenheit calibrations.
- 2 Max/Min – switches between a) current indoor/outdoor temperature. b) max. indoor/outdoor temperature recorded since last reset and c) minimum indoor/outdoor temperature recorded since last reset.
N.B: To reset memory press max/min for a few seconds. It then takes a few further seconds to update and register the new readings

HELPLINE 01406 372227

GARDMAN

Gardman Limited, High Street, Moulton,
Spalding, Lincolnshire, PE12 6QD, UK
Fax: +44 (0)1406 372233

