

Dual Display Thermometer Instructions

- 1) Remove printed protective film from LCD screen.
- 2) Remove insulation film from the battery contact by pulling where it is marked “**remove before use**”
N.B: To open the battery compartment place thumb where it is marked “open” and slide back to reveal one **AAA size Alkaline battery**.
- 3) Place unit indoors where lead can be routed to outdoors e.g. through window/door frame or vent etc.
Fix outdoor probe (on end of lead) in convenient position where outdoor temperature will be taken from.
N.B: The thermometer has its own stand which pulls out via a thumb catch at the bottom of its reverse. It can also be wall mounted on a screw by means of the “keyhole” at the top of its reverse.
- 4) Control buttons:
°C/°F – switches between Centigrade and Fahrenheit calibrations.
Max/Min – switches between a) current indoor/outdoor temp. b) max. in/out temp. recorded since last reset and c) min. in/out temp recorded since last reset.
N.B: To reset memory press max/min for a few seconds. It then takes a few further seconds to update and register the new readings.