

Assembly

- 1: Place one x 'Nut' (C) onto the threaded part of x 'Bolt Hinge' (B) and turn to near the end of the threaded part. (See Fig 1) Place 'Washer' (D) adjacent to 'Nut' (C).
- 2: Insert the threaded part of one of the 'Bolt Hinge' (B) through one of the holes in the front upright of the arch. (These holes will be found 110mm above the lowest horizontal bar and the horizontal bar above that). Place 'Washer' (D) on to the thread. Secure with one x 'Nut' (C) but leave the nut finger tight. Repeat this four times. (See Fig 2)
- 3: Turn the non-threaded part of the four x 'Bolt Hinges' (B) upwards. Lock the two x 'Gate Panels' (A) together with the gate fastener. Lower the fastened 'Gate Panels' (A) onto the 4 x 'Bolt Hinges' (B). (See Fig 3)
- 4: Adjust the bolt hinges until the gate sections meet evenly. (See Fig 4)
- 5: Your gate is now fully installed.

Fig. 1

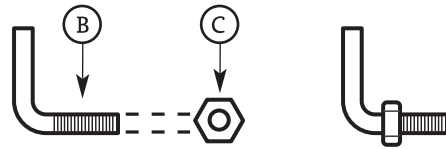


Fig. 2

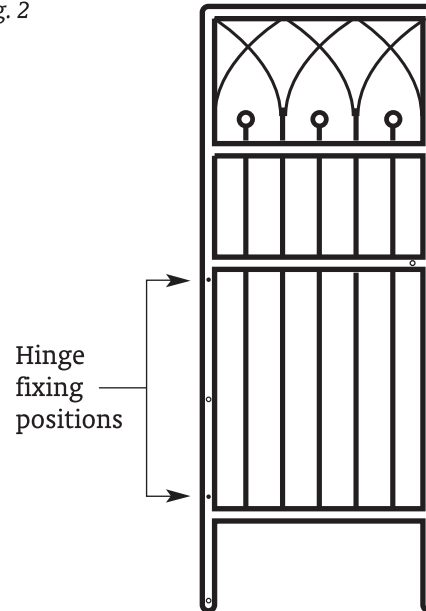


Fig. 3

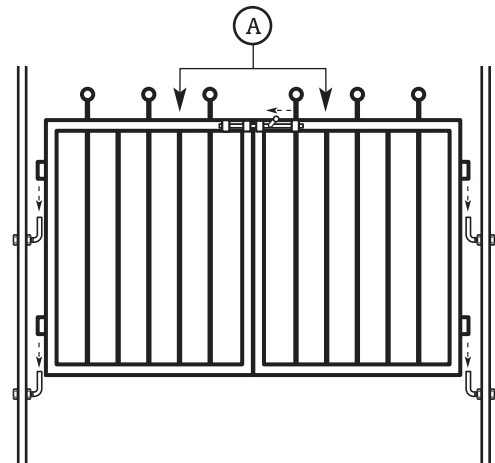


Fig. 4

